

MLS Magnifying Light

User Instructions

Equipoise™

Model: LSZ Magnifier Lamp

Instruction Sheet





With care and attention to the following information, your 'LSZ' Magnifying Lamp will give you years of satisfactory service and pleasure. Do not use in wet areas.

Bases


The lamp stem should be mounted vertically using one of the approved SUPERLUX bases.

Positioning the Base

- The frame is not designed for use with the head unit below the base unit, head movement in this position will result in frame damage or excessive joint wear.** Keep the head at least 100mm above the top of lamp bases (see Fig. B and C).

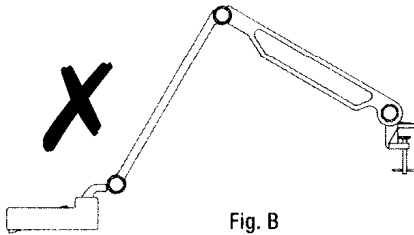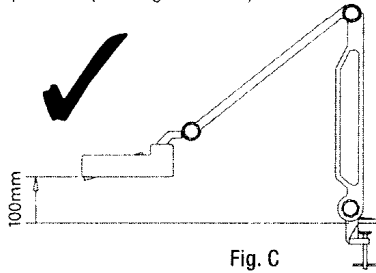


- Don't use lamp at extremes of movement** - B' Place work area no more than 800mm from base (see Fig. A)

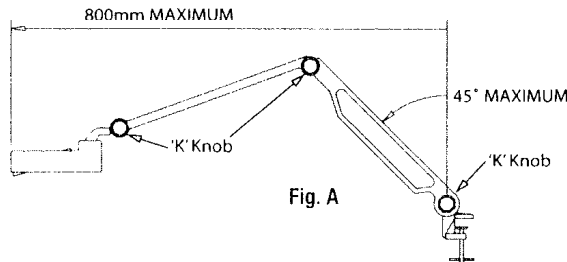

- Loosen 'K' knobs for easy movement.

Operation

- Select 1, 2 or 3 lamp function with the two switches on head of lamp.
- To replace a lamp, remove the plug from power supply socket, then prise off the diffuser (see Fig.D).

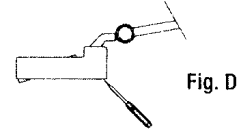

Replacement lamp is 9-watt compact fluorescent lamp, G23.

Gently slide out lamp and fit new one.

Replace the diffuser.

- When not in use, place the lens cover on magnifying glass to avoid accidental focusing of sun light.

Maintenance

- Clean **only** with a soft, dry cloth.
- If the supply cord is damaged, it must be replaced by a qualified service agent to avoid a hazard.

** Misuse of magnifier lamp will void warranty claims. - e'

2/03/05